


OAuth 2.0 Microsoft

Canon

1. Przejdź do panelu sieciowego urządzenia korzystając z przeglądarki i zaloguj się jako Administrator.

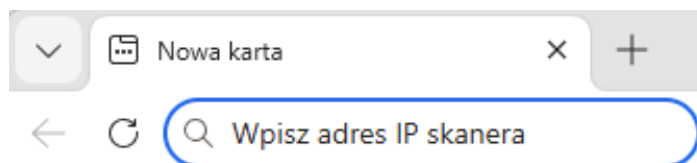

2. Ustawienie czasu:

Przejdź do Settings/Registration → Network Settings → SNTP Settings.

- Zaznacz „Use SNTP”, następnie wprowadź dane polskiego serwera czasu „194.146.251.100” albo „tempus1.gum.gov.pl”, lub dane wybranego przez siebie serwera czasu.

Settings/Registration : Preferences : Network Settings > SNTP Settings

SNTP Settings

☒ Use SNTP	
Polling Interval	1440 min. (10-2880)
NTP Server Address	194.146.251.100

3. Ustawienie e-mail:

Przejdź do Settings/Registration → Send → Network Settings – E-Mail/I-Fax Settings.

- W polu **SMTP Server** wprowadź adres SMTP serwera „smtp-mail.outlook.com”.
- W polu **E-Mail Address** wprowadź adres skrzynki pocztowej.
- W polu **SMTP TX** wpisz numer portu **587**.
- Zaznacz **Allow TLS (SMTP TX)**.

Aby sprawdzić, czy urządzenie ma połączenie z serwerem po wprowadzeniu danych, kliknij **Check SMTP Connection**.

Network Settings - E-Mail/I-Fax Settings

Last Updated : 12/08 2026 9:15:13

OK

Cancel

SMTP/POP Settings

*The setting for [SMTP Server] will be applied to [Check SMTP Connection], and the settings for [POP Server], [POP Login Name], and [POP Password] will be applied to [Check POP Connection].

Check SMTP Connection

Check POP Connection

☐ SMTP RX :

☐ POP RX

SMTP Server :

smtp-mail.outlook.com

E-Mail Address :

██@dks.pl

POP Server :

POP Login Name :

POP Password :

Confirm :

POP Interval :

0 min. (0=Off/1-99)

Specify Port Number for SMTP TX/POP RX

SMTP TX :

587

(1-65535)

POP RX :

110

(1-65535)

Authentication/Encryption Settings

☐ Allow TLS (POP)

POP Authentication Method :

Normal

☐ Use POP Authentication Before Sending

☐ Confirm TLS Certificate for POP RX

☐ Add CN to Verification Items

☒ Allow TLS (SMTP TX)

☐ Use SMTP Authentication (SMTP AUTH)

User Name :

(Max 256 characters)

Password :

(Max 256 characters)

4. Autoryzacja OAuth 2.0:

Przejdź do Settings/Registration → Send → OAuth 2.0 (Microsoft) Settings.

- Kliknij **Edit** w prawym górnym rogu.
- Zaznacz **Use OAuth 2.0 (Microsoft)**.
- W polu „Microsoft Entra ID Authorization Server Endpoint:” wpisz „https://login.microsoftonline.com/common/oauth2/v2.0”.

Edit Basic Settings

When [Use OAuth 2.0 (Microsoft)] is set to On, [Display Authentication Screen When Sending] will be disabled and [Information Used for SMTP Server Authentication] will be automatically set to [Device Settings].

OK

Cancel

Basic Settings

☒ Use OAuth 2.0 (Microsoft)

☐ Verify Server Certificate

☐ Add CN to Verification Items

Microsoft Entra ID Authorization Server Endpoint :

https://login.microsoftonline.com/common/oauth2/v2.0

- Następnie kliknij w link „<https://login.microsoft.com/device>”, aby sfinalizować proces autoryzacji OAuth 2.0. Pole **Information for Authorization** zostanie uzupełnione automatycznie po uzupełnieniu danych z poprzedniego kroku.

Settings/Registration : Function Settings : Send > OAuth 2.0 (Microsoft) Settings

OAuth 2.0 (Microsoft) Settings



Basic Settings

To activate a token after setting [Use OAuth 2.0 (Microsoft)] to On, the following operations must be performed:

1. Click the update button for [Last Updated], and check that [Successfully Connected] is displayed for [Server Connection Status].
2. Perform authorization from [Microsoft Entra ID Authorization Endpoint] in [Information for Authorization].
3. Click the update icon for [Last Updated], and check that [Active] is displayed for [Token Status].

Refer to the manual for details.

Edit...

Use OAuth 2.0 (Microsoft) :	On
Verify Server Certificate :	Off
Add CN to Verification Items :	Off
Microsoft Entra ID Authorization Server Endpoint :	https://login.microsoftonline.com/common/oauth2/v2.0

Server Connection Status

To display the latest registered information, click the update icon for [Last Updated].

Server Connection Status :	Successfully Connected
----------------------------	------------------------

Information for Authorization

To activate a token, follow the [Message] instructions and perform authorization from [Microsoft Entra ID Authorization Endpoint] before the user code expires.

After authorization is complete, do not turn OFF the main power of the device until the token is activated.

To display the latest registered information, click the update icon for [Last Updated].


Message :	To sign in, use a web browser to open the page https://login.microsoft.com/device and enter the code I2F335Z8Q to authenticate.
Microsoft Entra ID Authorization Endpoint :	https://login.microsoft.com/device
User Code :	I2F335Z8Q
User Code Expires In :	900 sec.

Token Status

To display the latest registered information, click the update icon for [Last Updated].

Token Status :	Being Acquired...
----------------	-------------------

- Przejdź autoryzację wykorzystując **User Code**. Należy pamiętać, że kod wygasa w ciągu 900 sekund- w razie jego wygaśnięcia wystarczy odświeżyć witrynę.

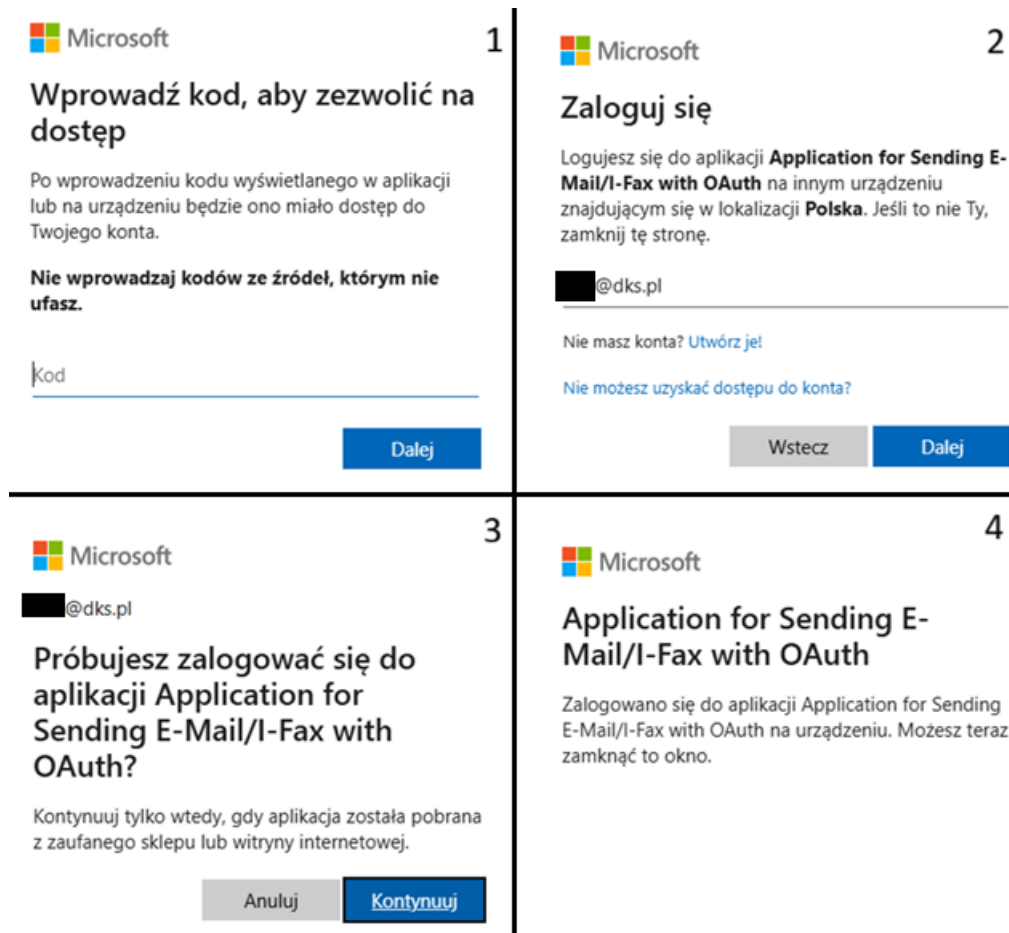

- Poprawna autoryzacja skutkuje zmianą statusu tokena na **Active**.

Information for Authorization

To activate a token, follow the [Message] instructions and perform authorization from [Microsoft Entra ID Authorization Endpoint] before the user code expires.

After authorization is complete, do not turn OFF the main power of the device until the token is activated.

To display the latest registered information, click the update icon for [Last Updated].

Message :	--
Microsoft Entra ID Authorization Endpoint :	--
User Code :	--
User Code Expires In :	-- sec.

Token Status

To display the latest registered information, click the update icon for [Last Updated].

Token Status :	Active
----------------	--------